



Yealink Yealink SIP-T21P E2

Account Setup Guide

Publication History

Date	Version	Author
=====	=====	=====
August 24th, 2017	1	Jeffrey K Brady

2000-2017 Ironton Telephone Co

Proprietary

© All rights reserved.

Information subject to change without notice.

The information disclosed herein is proprietary to Ironton Telephone Company or others and is not to be used by or disclosed to unauthorized persons without the written consent of Ironton Telephone Company. The recipient of this document shall respect the security status of the information.

Yealink SIP-T21P E2:

1. Access the Sip Device's IP Address.

- In order to provision the phone efficiently, you will need to log into the phone through its web interface.

A. Press "OK" button

I. or press Menu->Status.

II. Press "up" or "Down" arrows or to scroll through the list and view information.

 
B. The Phone Status will appear on the Screen.

I. Yealink Status Screen

a. Write down the phones IP Address.

b. If the IP address shows 0.0.0.0

01. Verify all connections to the Network.

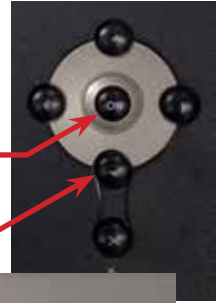

2. Accessing the Web Interface.

A. Enter the IP address into the web browser address bar.

B. The Login screen will appear.

I. Enter the Username in the text field.

II. Enter the Password in the text field.

III. Select the Login button.

 


C. The Phones Status Screen will open.

I. Select the Account Tab.


a. The Register section will open.

D. Select the account you wish to register using the drop-down menu.

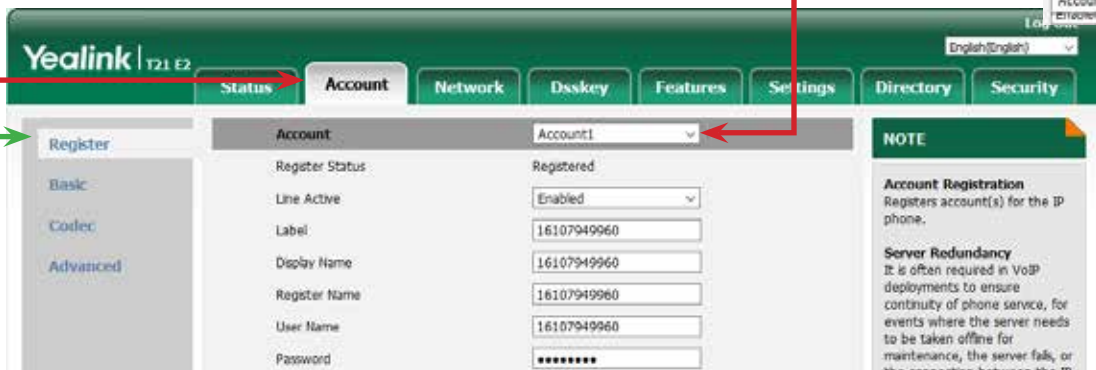

E. Enable the line.

 I. Select Enable in the Line Active drop-down menu.



F. Enter the following information for the Account in the text boxes.

I. Label:

- The name showing on the LCD of the Device.

a. Options.

01. Phone number.

02. Users Name.

03. and / or Extension Number.

II. Display Name:

- The local name showing on other SIP devices when called within the switch.

a. Options.

01. Phone number.
02. Users Name.
03. and / or Extension Number.

III. Register Name:

- The Account ID provided in the Welcome Letter.
 - 11 Digit Phone number.

 
IV. User Name:

- The Account ID provided in the Welcome Letter.
 - 11 Digit Phone number.

V. Password:

- a. The Service Password provided in the Welcome Letter.

G. Enter the SIP Server Information in the text boxes.

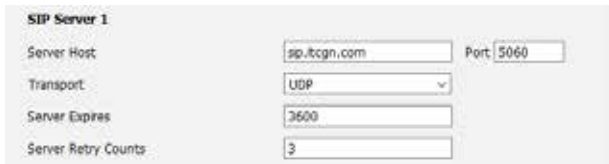

The screenshot shows a configuration form titled "SIP Server 1". It contains the following fields: "Server Host" with the value "sip.itcgn.com", "Port" with the value "5060", "Transport" with a dropdown menu set to "UDP", "Server Expires" with the value "3600", and "Server Retry Counts" with the value "3".

I. Server Host:

- a. sip.itcgn.com

 
II. Port:

- a. do not change from 5060

III. Transport

- a. Do not change from UDP.

H. Select the Confirm button at the bottom of the page when finished.



I. Select the Cancel button to cancel entries.

