



Yealink Yealink SIP-W52P

Account Setup Guide

Publication History

Date	Version	Author
=====	=====	=====
August 24th, 2017	1	Jeffrey K Brady

2000-2017 Ironton Telephone Co

Proprietary

© All rights reserved.

Information subject to change without notice.

The information disclosed herein is proprietary to Ironton Telephone Company or others and is not to be used by or disclosed to unauthorized persons without the written consent of Ironton Telephone Company. The recipient of this document shall respect the security status of the information.

Yealink SIP-W52P:

1. Access the Sip Device's IP Address.


- In order to provision the phone efficiently, you will need to log into the phone through its web interface.

- Press "OK" button.
 - The Status option should be highlighted.
- Press "OK" button.
 - The System Status option should be highlighted.
- Press "OK" button.
- The Phone Status will appear on the Screen.
- Status Screen:
 - Write down the phones IP Address.
 - If the IP address shows 0.0.0.0
 - Verify all connections to the Network.



2. Accessing the Web Interface.

- Enter the IP address into the web browser address bar.
- The Login screen will appear.
 - Enter the Username in the text field.
 - Enter the Password in the text field.
 - Select the Login button.
- The Phones Status Screen will open.
 - Select the Account Tab.
 - The Basic section will open.
- Select the account you wish to register using the drop-down menu.

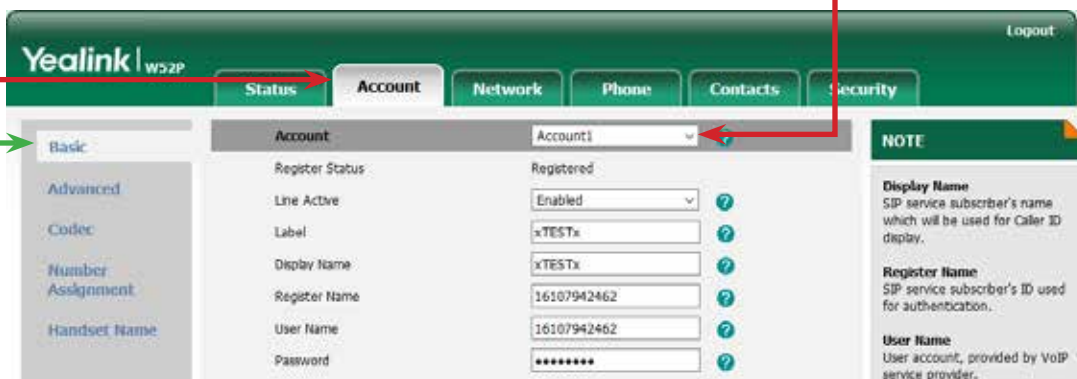

- Enable the line.
 - Select Enable in the Line Active drop-down menu.
- Enter the following information for the Account in the text boxes.
 - Label:
 - The name showing on the LCD of the Device.
 - Options:
 - Phone number.
 - Users Name.
 - and / or Extension Number.



II. Display Name:

- The local name showing on other SIP devices when called within the switch.

a. Options.

01. Phone number.
02. Users Name.
03. and / or Extension Number.

III. Register Name:

- The Account ID provided in the Welcome Letter.
 - 11 Digit Phone number.

IV. User Name:

- The Account ID provided in the Welcome Letter.
 - 11 Digit Phone number.

V. Password:

- a. The Service Password provided in the Welcome Letter.

G. Enter the SIP Server Information in the text boxes.



The screenshot shows a configuration form for SIP Server information. It includes the following fields and options:

SIP Server	<input type="text" value="sip.itcgn.com"/>	Port	<input type="text" value="5060"/>
Enable Outbound Proxy Server	<input type="text" value="Disabled"/>		<input type="checkbox"/>
Outbound Proxy Server	<input type="text"/>	Port	<input type="text" value="5060"/>
Transport	<input type="text" value="UDP"/>		<input type="checkbox"/>

I. Server Host:

- a. sip.itcgn.com

 
II. Port:

- a. do not change from 5060

III. Transport

- a. Do not change from UDP.

H. Select the Confirm button at the bottom of the page when finished.



I. Select the Cancel button to cancel entries.

